

SHOWER SOLUTIONS, INC.

Creators of The Crescent Rod™

Installation Guide

1.) Your Package Should Contain:

Allen Wrench

Decorator Anchor

Plug Anchor



1. Two assembled brackets each consisting of:

1. 1x Wall plate
2. 1x Swivel connector
3. 2x Retaining screws

2. One Sealed Hardware Package:

1. 1x Allen Wrench
2. 4x Wood Screws
3. 4x plug anchors (for tile)
4. 4x decorator anchors (for sheetrock/drywall)
5. 2x set screws in a small plastic bag

3. One Curved Crescent Shower Rod™


4. Instructions

!! Do not mount on acrylic or fibreglass type walls without consulting customer service!!

2.) The Crescent Rod™ Mounting Instructions


For 60" Standard Tub

Mount rod approximately 3" inside the point a straight rod is normally mounted.
The midpoint of the rod should extend several inches past the outside rim of the tub.

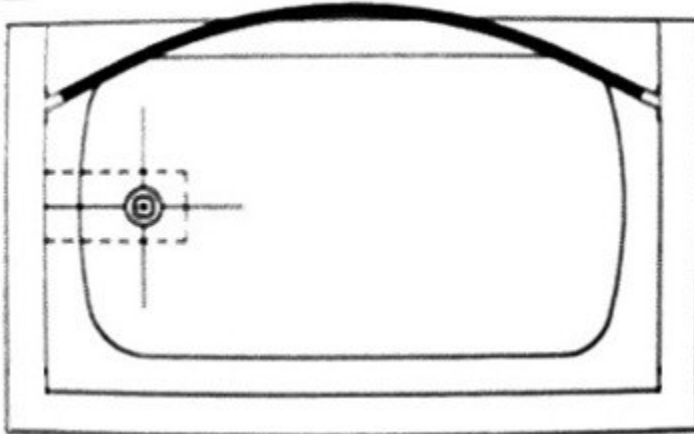

For 60" Oval Tub

Depending upon tub model, mount rod between 6" and 8" from centerline of the tub.
The middle portion of the rod should curve just outside the contour of the tub.

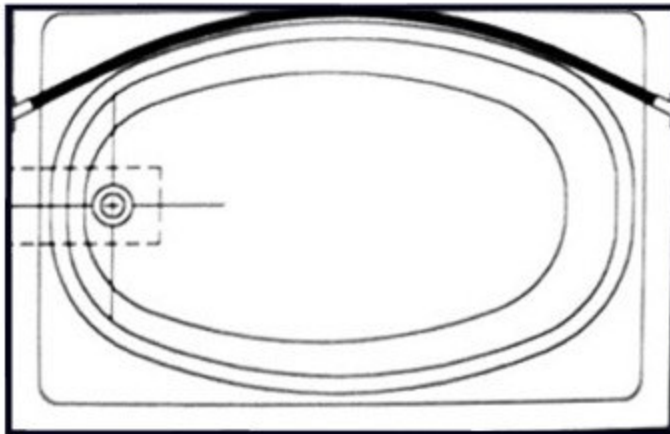

3.) The Crescent Rod™ Anchor Instructions

Unless you encounter a stud, each screw must be secured to the wall using the appropriate anchor.

Sheetrock/Wall Board:

Use Decorator anchor. Drill a small pilot hole through the wall to determine if there is a stud beneath your mark. If not, insert #2 Phillips screwdriver into anchor. Press into pilot hole while turning the anchor clockwise until seated flush with wall. Repeat for each screw.

Tile:

Use Plug Anchor. Using a glass/tile 1/4" drill bit, drill holes where marked. Blow the hole clean of dust. Tap anchor into hole until flush with surface.

Do not mount on acrylic or fibreglass type walls without consulting customer service!

4.) Installation Instructions

1. Read mounting instructions for proper rod placement.
2. Assemble Crescent Rod. Hand tighten remaining screws. Do not use setscrews at this time.
3. Measure: Hold rod up to desired position, one person at each end, to check height and location. Be sure that rod is level with a pencil lightly score marks at the top and bottom of the wall plate. Set rod down.
4. Remove retaining screws. Separate the wall plates from the rod. Leave the Swivel connectors on rod.
5. Place wall plates back on wall at pencil marks.
6. Mark screw holes at 12 and 6 O'clock positions. Set wall plate aside.
7. Read anchor instructions carefully. Drill screw hole as marked. Install 4 anchors unless a hole is on a stud.
8. Mount wall plates. Screw into anchors.
9. Place rod, with swivel connectors attached, into wall plates. Screw in retaining screws. Tighten.
10. Adjust rod. Be sure that each end is into connectors far enough for setscrew contact.
11. Insert and tighten setscrews with the allen wrench.
12. Marvel at the difference!

Adjustments

The Crescent Rod is designed to slide back and forth in the swivel connector adjusting for variations in the span between the walls.

Hardware:

The wall plates and swivel connectors can go on either wall (i.e., no left or right bracket).

Note: The swivel connector can be inserted into the wall plate with the setscrew facing up or down. It is recommended that the setscrew always face up!

When on top, the setscrew helps keep the curtain ring close to the wall.

5.) Customer Service

Questions or problems?

Call between 9 am and 5 pm CST

1-888-801-2255 (toll-free)

Fax 713-669-8454

Customer Service can be e-mailed at sales@showersolutions.com

The Crescent Rod is designed to fit the most common 60" tub enclosures. Occasionally, because of remodeling or non-standard tub size, you may encounter these situations:

1. Rod too Long:

If the rod is too long, the end can be cut with a tube cutter or hacksaw. Be sure to remove equal portions from each end to keep the contour centered.

2. Rod too Short:

If the span between the end of walls is greater than 59 1/2" you will need to order a 72" rod. Call Customer Service with your name, phone number, exact span measurement, rod finish (chrome, white, etc.) and mailing address.

Shower Solutions, Inc.

3139 W. Holcombe Blvd., PMB 635

Houston, Texas 77025

1-888-801-2255

Crescent Rod™ is a trademark of

Shower Solutions, Inc. Patents D 397,928, D 426,142. Other patents pending.